

ALBA

INSTRUCTION BOOKLET

CAL. SW01

FEATURES

Time/calendar display Hour, minute, seconds, month, date and day
 Stopwatch 1/100 sec for 30 min., 1sec up to 24 hours
 Changeover between 12 and 24 hour indications
 Note: Depress A to select the desired mode



NORMAL MODE



TIME

Hour, minute and seconds are displayed.



ALARM

Keep C depressed to read the alarm time
 (this illustration shows that the alarm keeps at 6:30 am)



ALARM ON/OFF

Alarm engaged.
 Keep B and C depressed at the same time.



CALENDAR

Month/ Date
 Keep B depressed, Month, date and day are displayed.



12 OR 24 HOUR INDICATION

Select 12 or 24 hour cycle option when setting normal time,
 hour by advancing figure to A /P for 12 hour mode or H for 24
 hour mode.



STOPWATCH MODE

Depress A to activate this mode.

B start/stop C: Split/split release/ Reset

Depress C to reset the stopwatch to 0.0000 before using the stopwatch.

 
Accumulated elapsed time measurement: B-B-B-B-C



Split time measurement: B-C-C-B-C




Measurement between two competitors: B-C-B-C-C



Depress A to return to the normal mode.

TIME/CALENDAR SETTING MODE

 Depress A three times to activate this mode.
Depress C to select the digits to be adjusted(fashing)



Depress B to reset the seconds to 00 or to set the other digits.
Keep B depressed to advance the digits quickly.
Notes: When the seconds count any number from 30 to 59 and C is depressed one minute is added.
Depress A to return to the normal mode.

ALARM SETTING MODE

HOUR

Depress A twice to activate this mode
Depress B to advance the hour



MINUTE

Depress C to activate this mode
Depress B to advance the minute
Depress A to return to the normal time mode



HOW TO SET THE HOUR CHIME ON

Depress C, alarm time displayed. Hold it.
Depress A, until all marks above the week of day are appeared.

The hour chime is on. The stopwatch is set with hour chime



HOW TO SET THE HOUR CHIME OFF

Depress C, alarm time displayed. Hold it.
Depress A, all marks will be disappeared.

The hour chime is off. No hour chime.



HOW TO SET THE SNOOZE FUNCTION ON

When the alarm on, depress B, then the alarm will be off.

In around 5 minutes, the alarm will be on again.

HOW TO SET THE SNOOZE FUNCTION OFF

If you do not need the snooze function, depress C when the alarm is on.
The alarm will be off, and the snooze function also off.

When the alarm is on around one minute, if no button is depressed,
the alarm will be off and the snooze function is also off automatically.