V33J MULTI DISPLAY

FEATURES, AND DISPLAY AND CROWN OPERATION

V33J watch is a multi-display watch featuring 24-hour, date and day hands.
V336 watch is a multi-display watch featuring date and day hands.

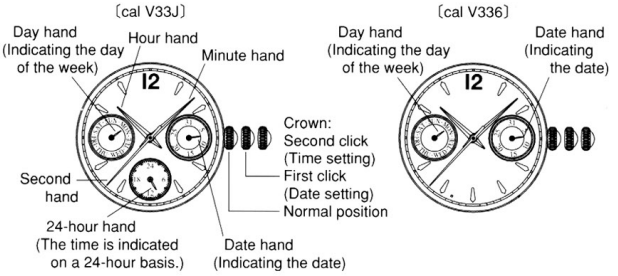

※Only V33J Watch has 24-hour hand, not V336 watch.
※As the hour hand moves, the 24-hour hand also moves correspondingly. The 24-hour hand cannot be set independently of the other hands.(only V33J)
※The day hand cannot be adjusted independently of the other hands. To set the day, turn the hour and minute hands until the day hand is set to the correct day. (Refer to "TIME SETTING".)

TIME SETTING (Day and time setting)

- The day hand cannot be adjusted independently of the other hands. Before setting the time, set the day by turning the hour and minute hands.

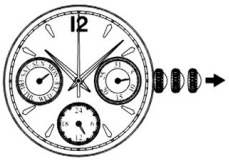

①Pull out the crown all the way to the second click when the second hand is at the 12 o'clock position. The second hand will stop on the spot.

②Turn the crown clockwise to advance the hour and minute hands.
When the hour and minute hands turn past the 12 o'clock marker, the day hand starts moving.
Keep advancing the hour and minute hands until the day hand is set to the next.
To advance the day hand quickly, turn back the hour and minute hands 4 to 5 hours after the day changes to the next, and then advance them again until the day hand is set to the next.
Repeat the procedure above until the day hand is set to the desired day.
※ When adjusting the day hand, turn the crown slowly.

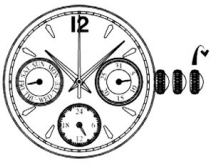

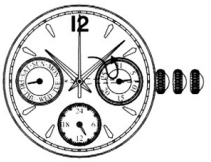

③Turn the crown clockwise to set the hour and minute hands to the desired time.
Note: Be sure to check that AM/PM is properly set.
※ When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.

DATE SETTING (Date hand setting)

Follow the procedure below to:
- set the date after setting the time.
- adjust the date on the first day of March or a month next to a 30-day month.

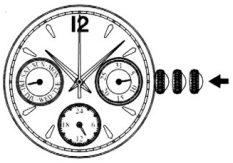

④ Push the crown back in to the normal position in accordance with a time signal.

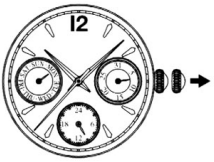

① Pull out the crown to the first click.

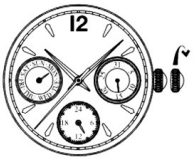

② Turn the crown clockwise to set the date hand to the desired date.

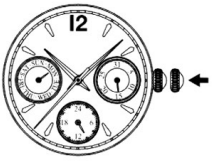

③ After the adjustment is completed, push the crown back in to the normal position.

※While setting the date hand, check that it moves properly in one-day increments.
※Do not set the date hand between 9:00 p.m. and 1:00 a.m. Otherwise, it may not turn properly.